


## Initial Setup of the CCA-3074 through direct attached console:

1. Cable the unit with power and attach suitable monitor (SVGA), keyboard and mouse (USB or PS2).
2. Power up the unit.
3. Using the mouse, navigate from the [Start] button to select the Firefox browser application to complete the setup.

## Initial Setup of the CCA-3074 through network:

1. Cable the unit (power, Ethernet initially).
2. Edit the FEP4600.ini file on the USB drive (see 'Setting the Initial IP Address' below).
3. Power up the unit with the USB drive inserted.
4. Using any web browser, connect to the CCA-3074 to complete the setup.

## Cabling the Unit

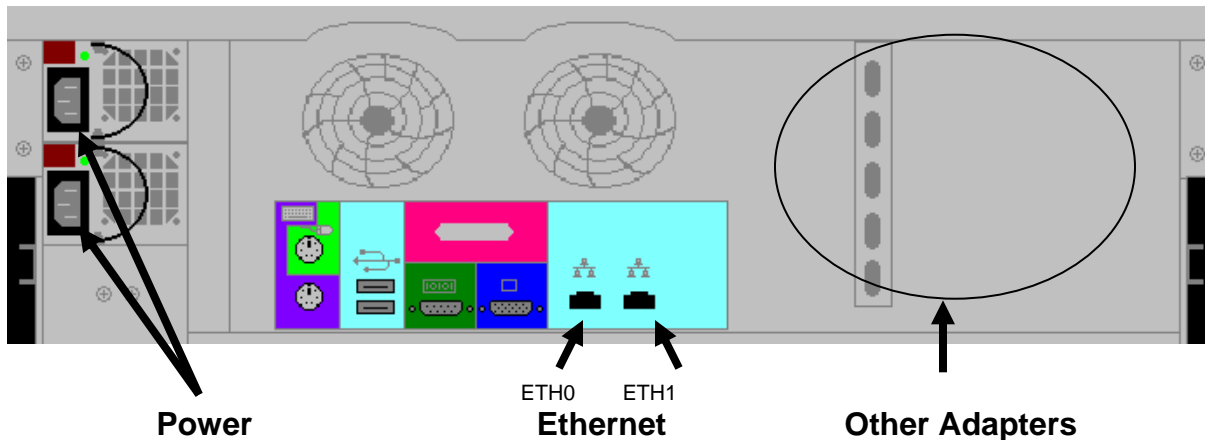

**Power:** Two different power cables (and sources) may be used

**Ethernet:** Use ETH0 to access the CCA-3074 using RJ45 connection for initial configuration.

**ESCON:** Connections are via ESCON Duplex cable.

**FICON:** Connection must be matched to the transceiver used, either Short Wave or Long Wave.

## Setting the Initial IP Addresses:

On the USB drive shipped with the unit is a file called FEP4600.ini, which includes a section that looks like this:

```
[Network]
eth0_ip=204.48.36.1
NetMask=255.255.255.0
DefaultGateway=204.48.36.250
```

1. Using a plain-text editor (such as Windows' Wordpad), change the IP addresses to the desired values. If the original USB drive cannot be located, just create the FEP4600.ini file with the entries shown above. *Note: no whitespace (spaces or tabs) is allowed in these entries.*
2. Put the drive into one of the sockets on the back of the CCA-3074 and turn it on. The values in the file on the drive will be copied to the permanent copy of FEP4600.ini on the hard disk, and will take affect immediately. The USB drive is not required for subsequent reboots (and should not be plugged in as it will overwrite the permanent configuration file during each reboot).

# CCA-3074 Quick Start Guide

## Initial Configuration

The Factory Default configuration that ships with your unit must be customized for your hardware and environment. Once you have cabled the unit and set the IP address to be compatible with your network connections, you can connect to it with any web browser. Refer to the *CCA-3074 Installation and Configuration Manual* for details on how to proceed with the configuration.

Key in the IP address of your CCA-3074 into the browser address window, or 127.0.0.1 if using the keyboard, mouse, and monitor of the CCA-3074.

Select this button to logon to the CCA-3074 to create the initial configuration and perform other administrative functions.

Access documentation that ships with the unit.

The Management Password is case sensitive, and is set at the factory to **admin**.

CU #	Name	PU Type	CU Status	SubChannels	Alarm
0	0	NSNA	Offline	All Offline	
1	1	NSNA	Offline	All Offline	
2	2	NSNA	Offline	All Offline	

View system info, logs, update software, create recovery CD, reboot.

Customize passwords, event log options, network interface, functional configuration and save/restore configurations.

Select individual interfaces to display status.